


T-5 STOCK BELLHOUSING INSTALLATION INSTRUCTIONS

VEHICLE MUST BE SECURELY SUPPORTED THROUGHOUT ENTIRE INSTALLATION PROCESS, FAILURE TO DO SO CAN RESULT IN SERIOUS INJURY OR DEATH.

ANY CLUTCH ADJUSTMENTS SHOULD BE MADE BEFORE INSTALLING THIS PRODUCT!

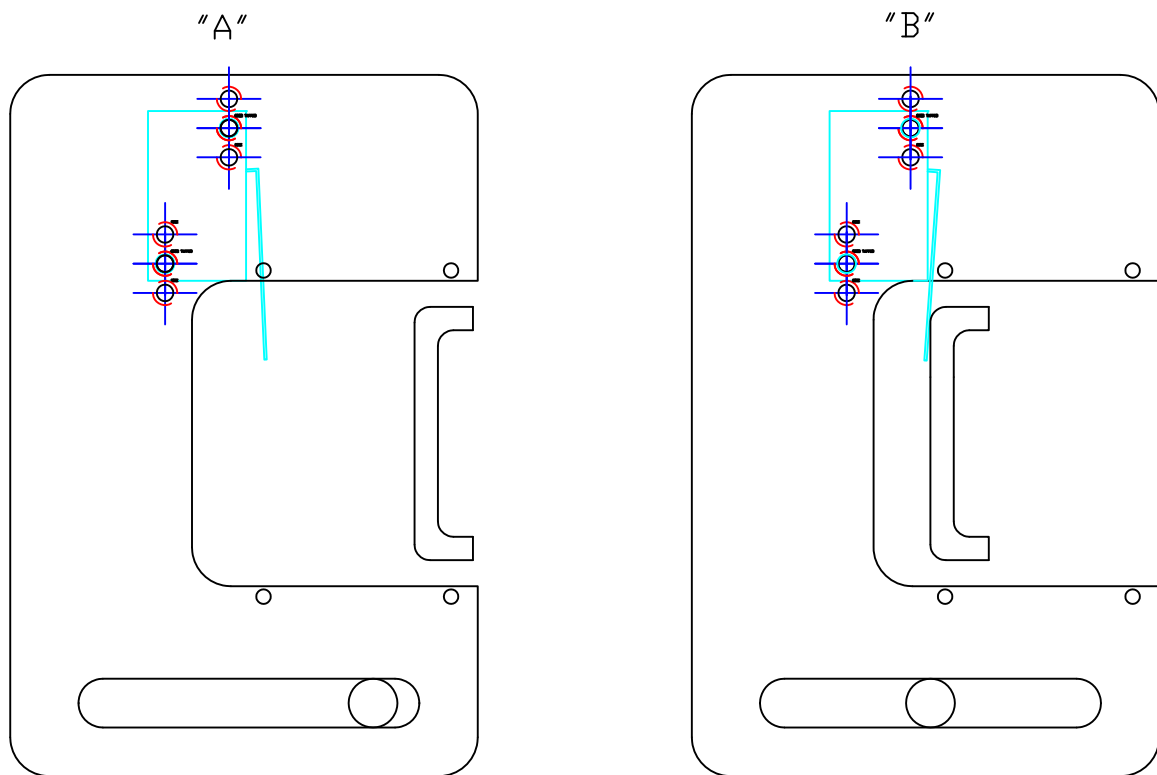

- 1 Remove dust cover from bell housing if so equipped.
2. The 4 small dowels will keep the bracket square in the fork opening of the bell housing.
3. Assemble switch to bracket as shown with bolts provided. Do not over tighten bolts.
4. Picture "A" shows bracket installed with clutch released. Have a helper depress clutch for next step. Slide bracket with switch toward clutch fork until you hear switch engage then just beyond but not so far that lever contacts switch body.
5. Diagram "B" shows bracket adjusted properly with clutch pedal to the floor. Do not allow fork to exert too much pressure on switch, light pressure is all that is needed to activate the switch.
6. When bracket is properly positioned tighten down longer dust cover bolt. Blue loc-tite and lock washer are recommended.
7. Attach wires per wiring diagram.